

Exhaust Fan and Ducting

Rear Wall of Sanctuary

1. Install Vent at peak of rear wall in sanctuary
2. Connect ducting from vent to outside wall
3. Install Exhaust fan at outside wall with louvers that open and close electrically when fan goes on and off

See Kit Twetan for actual design and materials

Front Wall of Sanctuary

See Kit about the same in the front of sanctuary